

CLASSROOM TECHNOLOGY GUIDE

RWU Classroom and Event Support 401-254-6363 option 2 mediatech@rwu.edu

> S Information Technology

Roger Williams University

LAW 276

In the Samsung display rooms you will find a **Samsung display and remote,** a **Lenovo computer located on the TV cart**, a **wireless mouse and keyboard** to use with the Lenovo PC and a **VGA connection**.

To power on the display, press the **Red Power button** on the remote. The display will show the last source that was selected.



Using Lenovo PC


To display the Lenovo PC, press the **source** button on the remote. The source menu will show on the display screen.



Then, use the **A** arrows on the remote to select **HDMI** and then press enter.





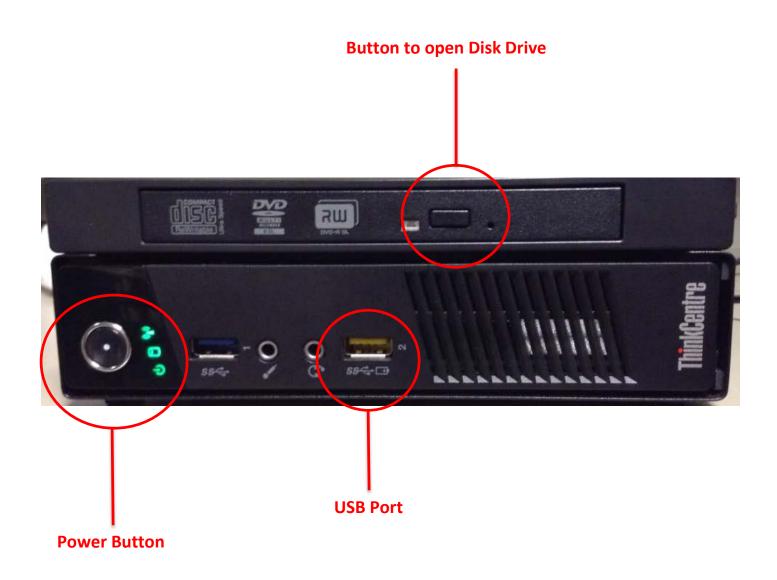

If the PC is not powered on press the **power button** located on the front of the PC. The power button will light up **green** when turned on.

If you wish to play a DVD, there is a disk drive located on the Lenovo PC. To open, press the **Black button** on the disk drive. Insert disk and close. The DVD will load onto the computer automatically.

Connecting a laptop

To connect a laptop to the system, use the **VGA cord** connected to the Samsung display. Plug the VGA cord into your laptop and the audio into the headphone jack.

 


To power on the display, press the **Red Power button** on the remote. The display will show the last source that was selected.



Press the **source** button on the remote. The source menu will show on the display screen.





PC

TV settings

If you need to adjust the volume of the display, simply use the remotes **Volume up and down buttons**. The volume level number with appear on the left side of the display.







If your laptop goes to sleep, the display will also enter sleep mode. To wake the display, press the **Red power button** on remote.



You can also use the **manual display control** on located on the back of the display in the bottom left corner. Move around the power control to wake the display.



Troubleshooting Display Connection

When you connect a laptop to the projector, the computer may be in extended mode. Extended mode is when the computer uses the projector as an extra monitor extending the visual range of the desktop. To correct this issue, Right click on the desktop. From the drop down menu, select **Screen resolution*.**

s	Shared Folder Synchronization
	Next desktop background
	New +
0	nView Desktop Manager
	Screen resolution
	Gadgets
2	Personalize

*in Windows 10, select display settings instead of screen resolution

In Screen resolution, you will find different display options. Under the Multiple displays drop down menu, select Duplicate these displays. Then, click Apply.


Display:	1 2. Multiple Monitors 🔻		
Resolution:	1280 × 1024 (recommended) v		
Orientation:	Landscape 👻		
Multiple displays:	Duplicate these displays 💌		
🛕 You must selec	Duplicate these displays Extend these displays	inges.	
Make this my m	Show desktop only on 1		Advanced settings
	Disconnect this display r items larger or smaller		
What display settin	gs should I choose?		

A box will appear on screen asking it you want to keep these display settings. Click **Keep changes**. The computer is now in duplicate mode. The projected image will now mirror your computer.

OK

Cancel

Apply

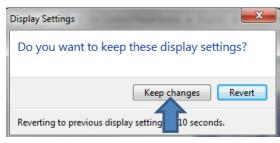

When connecting your mac click on **the Apple icon** ().From the drop down menu, select **System preferences**. From the **System preferences** menu, click **Displays**.



In display options, select the **Arrangement** tab. Check the **Mirror Displays** box. The projected image will now mirror your computer.

000	Thunderbolt Display				
▲ ► Show All				Q	
	Display	Arrangement	Color		
To rearrange the displays, drag To relocate the menu bar, drag	them to the d it to a differer	esired position. at display.			
	Ē		1		
Mirror Displays					
Mirror Displays					